

Содержание

The option is enabled by the configuration parameter in `/etc/dpi/fastdpi.conf`:

```
cp_server=192.168.0.18/cp
```

Here 192.168.0.18 - is the name or the address of the information page.

This address may include a (partial) path. This allows using the same server for various kinds of services.