

Содержание

- Backup auto restoration 3
 - Enable auto restoration DB from backups* 3
 - Enable auto restoration FS from backups* 4
 - Saving changes* 4


Backup auto restoration

Starting from version 2.25.13 there is a function to automatically restore FS and DB from backups [backups](#).




When automatic restore from backups is enabled, the dpiui2 server will work in replication mode (all kernel processes will be disabled).

Move to the DB and FS settings section, open the Administrator menu item, section «**Backup auto restoration settings**».

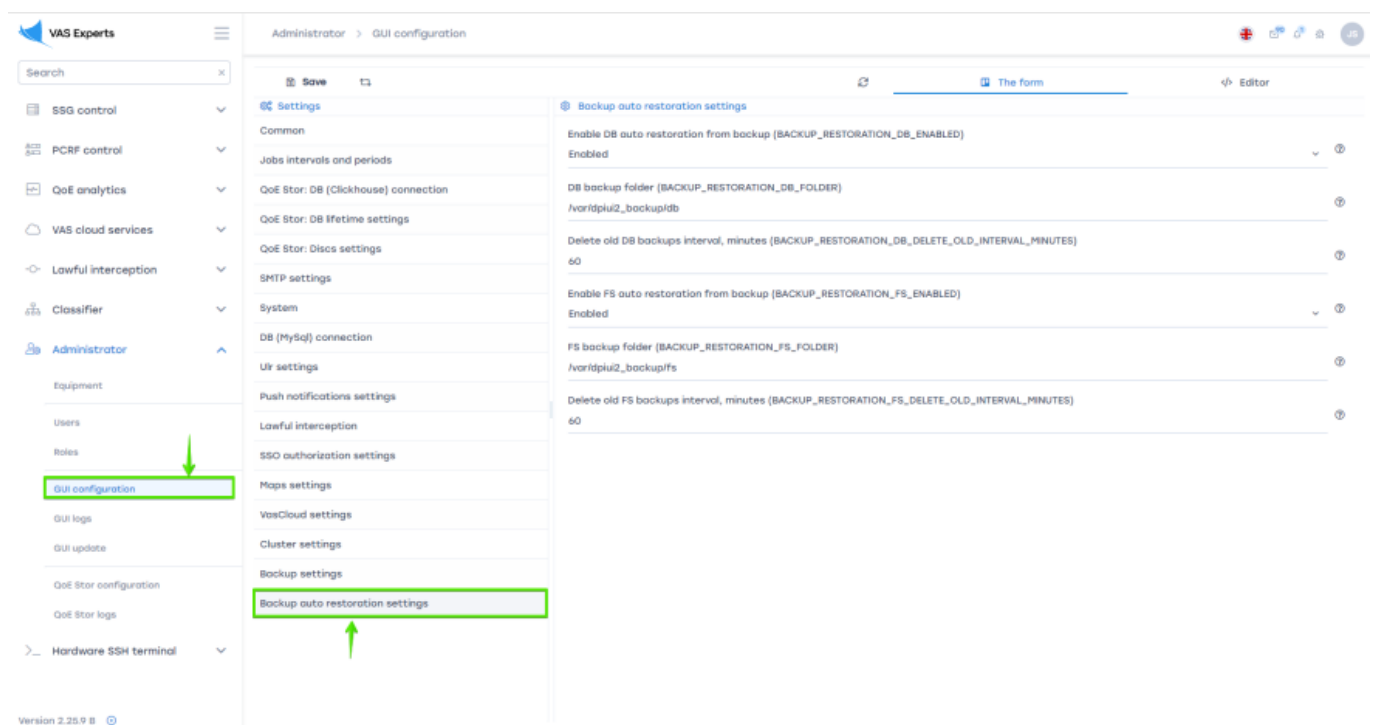

Enable auto restoration DB from backups

To enable auto restoration DB from backups, select "**Enabled**"

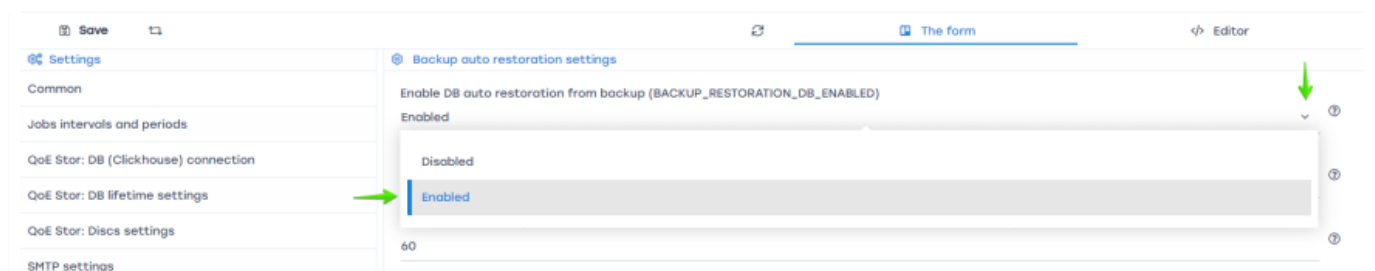

Specify the following settings

- **BACKUP_RESTORE_DB_ENABLED** - enable auto restoration DB from backups. (Default

values is Disabled)

- **BACKUP_RESTORATION_DB_FOLDER** - folder path with DB backups.
- **BACKUP_RESTORATION_DB_DELETE_OLD_INTERVAL_MINUTES** - delete old DB backups interval, minutes. (Default value is 0)



When set to "0", old backups will not be deleted.

Enable auto restoration FS from backups

To enable auto restoration FS from backups, select "**Enabled**"

The screenshot shows a settings panel on the left with a sidebar containing 'System', 'DB (MySQL) connection', 'UI settings', 'Push notifications settings', and 'Lawful interception'. The main area displays the 'Enable FS auto restoration from backup (BACKUP_RESTORATION_FS_ENABLED)' setting. The dropdown menu is open, showing 'Disabled' and 'Enabled' options. A green arrow points to the 'Enabled' option, and another green arrow points to the dropdown arrow icon. Below the dropdown, the value '60' is visible.



FS backup include **.env** files and folder contents **/var/dpiui2/backend/storage**

Укажите следующие настройки

- **BACKUP_RESTORATION_FS_ENABLED** - enable auto restoration FS from backups. (Default values is Disabled)
- **BACKUP_RESTORATION_FS_FOLDER** - folder path with FS backups.
- **BACKUP_RESTORATION_FS_DELETE_OLD_INTERVAL_MINUTES** - delete old FS backups interval, minutes. (Default value is 0)



When set to "0", old backups will not be deleted.

Saving changes

To save the edited parameters, click the "**Save**" button.

VAS Experts

Administrator > GUI configuration

Search

SSG control

PCRf control

QoS analytics

VAS cloud services

Lawful interception

Classifier

Administrator

Equipment

Users

Roles

GUI configuration

GUI logs

GUI update

QoS Stor configuration

QoS Stor logs

Hardware SSH terminal

Save

Settings

Common

Jobs intervals and periods

QoS Stor: DB (Clickhouse) connection

QoS Stor: DB lifetime settings

QoS Stor: Discs settings

SMTP settings

System

DB (MySQL) connection

UIr settings

Push notifications settings

Lawful interception

SSO authorization settings

Maps settings

VasCloud settings

Cluster settings

Backup settings

Backup auto restoration settings

Backup auto restoration settings

Enable DB auto restoration from backup (BACKUP_RESTORE_DB_ENABLED)

Enabled

DB backup folder (BACKUP_RESTORE_DB_FOLDER)

/var/dpiu2_backup/db

Delete old DB backups interval, minutes (BACKUP_RESTORE_DB_DELETE_OLD_INTERVAL_MINUTES)

60

Enable FS auto restoration from backup (BACKUP_RESTORE_FS_ENABLED)

Enabled

FS backup folder (BACKUP_RESTORE_FS_FOLDER)

/var/dpiu2_backup/fs

Delete old FS backups interval, minutes (BACKUP_RESTORE_FS_DELETE_OLD_INTERVAL_MINUTES)

60

The form

Editor

Version 2.25.9 B



When automatic restore from backups is enabled, the dpiu2 server will work in replication mode (all kernel processes will be disabled).