

Содержание

6 PCRF server connection	3
---------------------------------------	----------

6 PCRF server connection

You can connect only one PCRF policy server via SSH protocol for further GUI management.

To connect the PCRF server, follow these steps:

1. Add a sudo user on the connected hardware. See [sudo user](#).
2. In the [Administrator / Equipment](#) section, add new equipment. In the Hardware Type field, enter FastPCRF. See [Add \(connect\) new server](#).