

Table of Contents

- Connections 3
 - Reports* 3
 - Add Request 3
 - Add a subquery 11
 - Update 11
 - Change 11
 - Delete 11

Connections

To go to the section, click the **LAWFUL INTRCEPTION** menu item, then click the **CONNECTION** menu item.

VAS Experts

Search

SSG control

PCRF control

QoS analytics

VAS cloud services

Lawful interception

Connections

Traffic generation

Traffic capture

Traffic decode

Traffic decode logs

Cloning a website

Network audit

Health map

Administrator

Hardware SSH terminal

Lawful interception > Connections

Reports

Requests

Request	Date	User	Status	Data
---------	------	------	--------	------

Results

Create subquery

AppHttpFtpMailImVoipPstnFlows

Operator	Connection	IP address	Username	Calling	Called	Connection	Session ID
----------	------------	------------	----------	---------	--------	------------	------------

On the page 100

Reports

Add Request

To add a connection request, click on the **"Add Request"** button.

Connections search request

Description

Period

Operators

Max number of entries

Max number of records in query results

Resources and services

Aaa subscribers sessions

☐ Aaa subscribers session

☐ Http

☐ Ftp

☐ E-mail

☐ Im

☐ Voip

☐ Pstn

☐ Terminal sessions

☐ Flows

☐ Enable search

☐ Connection point

Connection point

☐ Connection type

Connection type

☐ Subscriber login

☐ Subscriber password

Subscriber login

Subscriber password

☐ IP address

IP address

☐ Protocol code

Protocol code

Cancel Save

- **Description.** This field contains the name or description of the request.
- **Period.** This field is filled in by selecting the start and end dates of the period in the calendar.
- **Operators.** This field is filled in by selecting an operator from the drop-down list.
- **Maximum number of entries.** This field is filled in by selecting the number of entries from the drop-down list
- **Resources and Services.**

Aaa session subscribers

Resources and services

Aaa subscribers sessions

☒ Aaa subscribers session

☐ Http

☐ Ftp

☐ E-mail

☐ Im

☐ Voip

☐ Pstn

☐ Terminal sessions

☐ Flows

☐ Enable search

☐ Connection point

Connection point

☐ Connection type

Connection type

☐ Subscriber login

☐ Subscriber password

Subscriber login

Subscriber password

☐ IP address

IP address

☐ Protocol code

Protocol code

Cancel Save

- **Enable search.** This option allows you to enable the search for subscribers.
- **Connection point.** ID of the data connection point.
- **Connection type .**
- **Subscriber login.** The subscriber's login is entered in this field.
- **Subscriber's password.** The subscriber's password is entered in this field.
- **IP address.** The subscriber's password is entered in this field.

- **Protocol code.** The protocol code is entered in this field.
- **Phone card number UPD ping.** The phone card number is entered in this field.
- **Calling number.** The calling number is entered in this field.
- **Called number.** The called number is entered in this field.
- **Код зоны обслуживания (SAC).** В данное поле вводится код зоны обслуживания.
- **Mobile station ID.** Enter the mobile station ID in this field.
- **Access Point (APN).** An access point is entered in this field.
- **NAS server.** Enter the IP address of the NAS server and the port of the NAS server in this field.
- **GPRS/EDGE SGSN IP address.** Enter the GPRS/EDGE SGSN IP address in this field.
- **GPRS/EDGE GSM IP address.** The GPRS/EDGE GGSN IP address is entered in this field.
- **IMEI of the mobile subscriber.** The IMEI of the mobile subscriber is entered in this field.
- **Mobile subscriber's IMSI.** The IMSI of the mobile subscriber is entered in this field.
- **Modem pool number.** The number of the modem pool is entered in this field.
- **User equipment.** Enter the MAC address, ATM Network Virtual Path Number (VPI) and ATM Network Virtual Channel Number (VCI) in this field.
- **Base station (connection established).** In this field, enter the base station area code (connection established), the base station code (connection established) and the base station time compensation (connection established).
- **Base station (connection completed).** In this field, enter the base station area code (connection completed), the base station code (connection completed) and the base station time compensation (connection completed).

Http

- **Enable search.** This option allows you to enable the search for subscribers.
- **Connection point.** ID of the data connection point.
- **Url.** Enter the url in this field.
- **Http method.** The http method is selected from the drop-down list.
- **Source IP.** In this field, enter the source Ip and the source port.
- **Recipient's IP.** In this field, enter the recipient's Ip and the recipient's port.
- **Reason for termination.** The reason for connection termination is entered in this field.
- **Subscriber ID.** The subscriber ID is entered in this field.

FTP

The screenshot shows a configuration window titled 'Resources and services' with a sub-tab 'Ftp'. On the left, a list of services includes 'Aaa subscribers session', 'Http', 'Ftp' (selected), 'E-mail', 'Im', 'Voip', 'Pstn', 'Terminal sessions', and 'Flows'. The main area contains the following fields:

- ☐ Enable search
- ☐ Connection point
- Connection point: _____
- ☐ Ftp-login ☐ Ftp-password
- Ftp-login: _____ Ftp-password: _____
- ☐ Server name
- Server name: _____
- ☐ Source IP
- Source IP: _____ Source port: _____
- ☐ Destination IP
- Destination IP: _____ Destination port: _____

At the bottom are 'Cancel' and 'Save' buttons.

- **Enable search.** This option allows you to enable the search for subscribers.
- **Connection point.** ID of the data connection point.
- **Sender.** The sender's e-mail address is entered in this field.
- **Recipient.** The recipient's e-mail address is entered in this field.
- * **Copy.** In this field, enter the e-mail of the recipient of the copy of the mail message.
- **Subject.** The subject of the message is entered in this field.
- **Message.** The text of the message is entered in this field.
- **Server name.** In this field, enter the name of the server through which the email was sent.
- **Attachments.** You must select the option of having attachments from the drop-down list.
- **Source IP.** In this field, enter the source IP and the source port.
- **Recipient IP.** The recipient's IP address and the recipient's port are entered in this field.
- **Reason for completion.** The reason for connection termination is entered in this field.
- **Subscriber ID.** The subscriber ID is entered in this field.

E-mail

The screenshot shows a configuration window titled 'Resources and services' with a sub-tab 'E-mail'. On the left, a list of services includes 'Aaa subscribers session', 'Http', 'Ftp', 'E-mail' (selected), 'Im', 'Voip', 'Pstn', 'Terminal sessions', and 'Flows'. The main area contains the following fields:

- ☐ Enable search
- ☐ Connection point
- Connection point: _____
- ☐ Sender ☐ Recipient
- The sender, for example petya@gmail. The recipient, for example, vasya@gmail
- ☐ Copy
- The recipient of a copy of the email message
- ☐ Subject
- The message subject
- ☐ Message
- The message text

At the bottom are 'Cancel' and 'Save' buttons.

- **Enable search.** This option allows you to enable the search for subscribers.

- **Connection point.** ID of the data connection point.
- **Sender.** The sender's e-mail address is entered in this field.
- **Recipient.** The recipient's e-mail address is entered in this field.
- **Copy.** In this field, enter the e-mail of the recipient of the copy of the mail message.
- **Subject.** The subject of the message is entered in this field.
- **Message.** The text of the message is entered in this field.
- **Server name.** In this field, enter the name of the server through which the email was sent.
- **Attachments.** You must select th

Im

- **Enable search.** This option allows you to enable the search for subscribers.
- **Connection point.** ID of the data connection point.
- **Sender ID.** In this field, the user ID of the sender.
- **Recipient ID.** In this field, the user ID of the recipient.
- **Sender's name.** The sender's public name is entered in this field.
- **Recipient's name.** The recipient's public name is entered in this field.
- **Message.** The text of the message is entered in this field.
- **User name.** The user's password is entered in this field.
- **Protocol.** This field is filled in by selecting the protocol from the drop-down list.
- **IP source.**

Voip

Resources and services	Voip
☐ Aaa subscribers session	☐ Enable search
☐ Http	☐ Connection point
☐ Ftp	Connection point
☐ E-mail	☐ Calling number
☐ Im	☐ Called number
☒ Voip	Calling number
☐ Pstn	☐ Calling number after conv.
☐ Terminal sessions	Calling number after conversion
☐ Flows	☐ Called number after conv.
	Calling number in the E164 network
	☐ Called number in the E164 network
	Calling number in the E164 network
	☐ Duration of conversation
	Duration of conversation
	Cancel Save

- **Enable search.** This option allows you to enable the search for subscribers.
- **Connection point.** ID of the data connection point.
- **Calling number.** The calling number is entered in this field.
- **The called number.** The called number is entered in this field.
- **The calling number after conversion.** The calling number is entered in this field after conversion.
- **The called number after conversion.** The number to be called after conversion is entered in this field.
- **The calling number in the E164 network.** The calling number in the E164 network is entered in this field.
- **The called number in the E164 network.** In this field, enter the called number in the E164 network.
- **Duration of the conversation.** The duration of the conversation in seconds is entered in this field.
- **Connection method.** The connection method is entered in this field.
- **Initiator's name.** Enter the name of the initiator of the communication in this field.
- **Conference ID.** The conference ID is entered in this field.
- **Incoming beam for GSM Network.** The incoming beam identifier for the GSM network is entered in this field.
- **Incoming beam for W/CDMA, UMTS network.** Enter the MAC address, ATM Network Virtual Path Number (VPI), and ATM Network Virtual Channel number (VCI) in this field.
- **Outgoing beam for GSM Network.** The outgoing beam identifier for the GSM network is entered in this field.
- **Outgoing beam for W/CDMA, UMTS network.** Enter the MAC address, ATM Network Virtual Path Number (VPI), and ATM Network Virtual Channel number (VCI) in this field.
- **Protocol.** This field is filled in by selecting the protocol from the drop-down list.
- **I P-source.** In this field, enter the source IP and the source port.
- **Recipient IP.** The recipient's IP address and the recipient's port are entered in this field.
- **Reason for completion.** The reason for connection termination is entered in this field.
- **Subscriber ID.** The subscriber ID is entered in this field.

Pstn

Resources and services	Pstn
☐ Aaa subscribers session	☐ Enable search
☐ Http	☐ Caller's phone number
☐ Ftp	☐ Phone number of called
☐ E-mail	Caller Phone number of called
☐ Im	☐ Caller's internal number
☐ Voip	☐ Internal number of called
☐ Pstn	Caller Internal number of called
☐ Terminal sessions	☐ Duration of conversation
☐ Flows	Duration of conversation
	☐ Connection method
	Connection method
	☐ Caller type
	☐ Type of called
	Caller type Type of called
	Cancel Save

- **Enable search.** This option allows you to enable the search for subscribers.
- **Caller's phone number.** The caller's phone number is entered in this field.
- **The phone number of the called.** The phone number of the called person is entered in this field.
- **Caller's internal number.** The caller's internal number is entered in this field.
- **Internal number of the called.** The internal number of the called person is entered in this field.
- **Duration of the conversation.** The duration of the conversation in seconds is entered in this field.
- **Connection method.** The connection method is entered in this field.
- **Caller type.** This field is filled in by selecting the type from the drop-down list.
- **Type of the called subscriber.** This field is filled in by selecting the type from the drop-down list.
- **Switch code.** The switch code is entered in this field.
- **Border switch code.** The code of the border switch is entered in this field.
- **DVO at connection.** The DVO is entered in this field when connecting.
- **Forwarding number.** The forwarding number is entered in this field.
- **Phone card number.** The phone card number is entered in this field.
- **Incoming beam.** The ID of the incoming beam is entered in this field.
- **Outgoing beam.** The ID of the outgoing bundle is entered in this field.
- **Reason for completion.** The reason for connection termination is entered in this field.

Terminal sessions

Resources and services	Terminal sessions
☐ Add subscribers session	☐ Enable search
☐ Http	☐ Connection point
☐ Ftp	Connection point
☐ E-mail	☐ Source IP
☐ Im	Source IP Source port
☐ Voip	☐ Destination IP
☐ Pstn	Destination IP Destination port
☐ Terminal sessions	☐ Subscriber ID
☐ Flows	Subscriber ID

Cancel Save

- **Enable search.** This option allows you to enable the search for subscribers.
- **Connection point.** ID of the data connection point.
- **Source IP.** In this field, enter the source IP and the source port.
- **Recipient IP.** The recipient's IP address and the recipient's port are entered in this field.
- **Subscriber ID.** The subscriber ID is entered in this field.

Flows

Resources and services	Flows
☐ Add subscribers session	☐ Enable search
☐ Http	☐ Connection point
☐ Ftp	Connection point
☐ E-mail	☐ Protocol code
☐ Im	Protocol code
☐ Voip	☐ Source IP
☐ Pstn	Source IP Source port
☐ Terminal sessions	☐ Destination IP
☐ Flows	Destination IP Destination port
	☐ SNI, CN
	SNI, CN

Cancel Save

- **Enable search.** This option allows you to enable the search for subscribers.
- **Connection point.** ID of the data connection point.
- **Protocol code.** In this field, enter the protocol code in accordance with RFC1700, or the port number for TCP/UDP.
- **IP source.** In this field, enter the source IP and the source port.
- **Recipient IP.** The recipient's IP address and the recipient's port are entered in this field.
- **SNI, CN.** Enter SNI, CN.
- **Subscriber ID** in this field. The subscriber ID is entered in this field.

Add a subquery

To add a subquery to the connection, the user must click on the **"Add subquery"** button.



In the window that opens, set the parameters. The data entry procedure is described above.

Update

To update the list of requests, click on the **"Update"** button.



Change

To change the request parameters, click on the **"Edit"** button, which is located to the left of each list request.

A screenshot of a table with two rows. The first row has a square icon with a plus sign highlighted by a red box. The table contains the following data:

☒	TEST	19.06.2022 18:58	John Smith	Data is not read	0	
☒	TEST1	19.06.2022 18:58	John Smith	Data is not read	0	

Delete

To delete a request, click on the **"Delete"** button, which is located to the right of each list request.

A screenshot of the same table as in the previous block. In this view, the 'Delete' button, represented by a trash can icon, is located at the end of the second row and is highlighted with a red rectangular box.

☒	TEST	19.06.2022 18:58	John Smith	Data is not read	0	
☒	TEST1	19.06.2022 18:58	John Smith	Data is not read	0	