

Table of Contents

3 Interfaces Configuration 3

3 Interfaces Configuration

DPI platform is configured by the file `/etc/dpi/fastdpi.conf`. After the changes are made you have to apply the settings using [the service administration commands](#).

1. [Difference in Versions](#)
2. [DNA Version Configuration](#)
3. [DPDK Version Configuration](#)