

# **Содержание**

<b>3 Interfaces Configuration .....</b>	<b>3</b>
---	----------



# 3 Interfaces Configuration

DPI platform is configured by the file /etc/dpi/fastdpi.conf. After the changes are made you have to apply the settings using [the service administration commands](#).

1. [Difference in Versions](#)
2. [DNA Version Configuration](#)
3. [DPDK Version Configuration](#)