Содержание

2 Stingray Service Gateway implementation	3
2.1 Preparing the server and installing CentOS 8	
2.2 Preconfiguring of CentOS 8	
2.3 Configuring the VAS Experts DPI	
2.3.1 Configuring of transit	
2.3.2 Statistics gathering	

2 Stingray Service Gateway implementation

If you got the off-the-shelf system from us: please follow this section: System connection.

Otherwise, you should install the CentOS 8 operating system on your server manually and provide us with remote access via SSH and root privileges for installation and initial configuration of the platform. Once the installation is completed the remote access can be closed.

2.1 Preparing the server and installing CentOS 8

- Before mounting the server in a rack make sure that it meets the requirements. If
 inconsistencies are observed at this stage, please contact the VAS Experts technical support in
 order to address promptly issues that arise.
- 2. Install CentOS 8.x using the following link: ISO CentOS 8.x minimal



Please take a look at list of supported kernel versions.



CentOS version 7 currently is not supported!

2.2 Preconfiguring of CentOS 8

1. Create the vasexpertsmnt user:

```
adduser -m -G wheel -u 3333 vasexpertsmnt
```

2. Set the password for **vasexpertsmnt**:

```
passwd vasexpertsmnt
```

For convenience, you can generate a password using openssl:

```
openssl rand -base64 15
```

- 3. Please save vasexpertsmnt password.
- 4. Set the permission the wheel group users to issue all the commands on behalf of all users. To do this, add the following line to /etc/sudoers:

```
%wheel ALL=(ALL) NOPASSWD: ALL
```

5. To provide remote access via SSH and to restrict on valid IP addresses from the list:

```
45.151.108.0/24, 94.140.198.64/27, 78.140.234.98, 193.218.143.187, 93.100.47.212, 93.100.73.160, 77.247.170.134, 91.197.172.2, 46.243.181.242, 93.159.236.11
```

just add the following lines to the /etc/ssh/sshd config file:

PermitRootLogin no AllowUsers vasexpertsmnt@94.140.198.64 vasexpertsmnt@78.140.234.98 vasexpertsmnt@5.200.43.10 vasexpertsmnt@193.218.143.187 vasexpertsmnt@93.100.47.212 vasexpertsmnt@93.100.73.160 vasexpertsmnt@77.247.170.134 PasswordAuthentication yes

- 6. Set the IP address.
- 7. After you make sure the remote access via SSH is provided, send the password and username to the VAS Experts technical support.

! Save your settings since the server will be restarted during the installation process!



Initial installation of the DPI platform has to be made by service engineers of the VAS Experts technical support or by the VAS Experts partners.



Do not upgrade the OS kernel before upgrade system activation. This may lead to malfunction of the network card driver¹⁾.

2.3 Configuring the VAS Experts DPI

Once the license and the fastdpi are installed, at least 3 network interfaces will be available in the system:

- 1) **dna0** is used as an **input** port for traffic transit via DPI;
- 2) **dna1** is used as an **output** port for traffic transit via DPI (it is absent when using mirroring connection scheme);
- 3) **eth0** is used as **management** port for the VAS Experts DPI.

It is recommended to check the IP address settings of management port after the the VAS Experts DPI initial setup.

Next, you should edit the /etc/dpi/fastdpi.conf configuration file:

2.3.1 Configuring of transit

When installing the Stingray Service Gateway using INLINE installation scheme:

```
in_dev=dna0
out_dev=dna1
#Scale factor is about 1 for every 1 Gigabit of bandwidth
scale_factor=10
timeout_check_dev=0
#FDPI Control
```

```
ctrl_port=29000
ctrl_dev=lo

#Turn on UDP detection
only_tcp=0

#Turn on UDR
udr=1
```

When installing the Stingray Service Gateway using MIRRORING installation scheme:

```
in_dev=dna1:dna2:dna3
asym_mode=1
#Scale factor is about 1 for every 1 Gigabit of bandwidth
scale_factor=10
timeout_check_dev=0

#FDPI Control
ctrl_port=29000
ctrl_dev=lo

#Turn on UDP detection
only_tcp=0

#Turn on UDR
udr=1
```

2.3.2 Statistics gathering

```
http parse reply=1
# Enabling the collection and export of statistics
netflow=8
# Managing the export format for a complete netflow
netflow full collector type=2
# Name of the network interface that sends netflow with statistics
netflow dev=eth3
# Periodicity of data export in seconds
netflow timeout=20
# IP address and port number of the netflow collector with full statistics
netflow full collector=172.18.254.124:1500
# The maximum netflow in Mbit/s
netflow rate limit=30
# The time in seconds after which the non-active session is considered
complete
netflow passive timeout=40
# The length of the fragment for a long session in seconds
netflow_active_timeout=120
```

```
#URL upload
# The name of the network interface for sending clickstream via ipfix
ipfix_dev=eth3
# IP or the domain name (: port) of the clickstream header ipfix. You can
specify several collectors separated by a comma.
ipfix_tcp_collectors=172.18.254.124:1501
# Unique domain (id) for the recognition by the collector
ipfix_observation=127
#SIP
# IP or the domain name (: port) of the meta clickstream header ipfix. You
can specify several collectors separated by a comma.
ipfix_meta_tcp_collectors=172.18.254.124:1511
rlimit_fsize=320000000000
```



Additional settings are made depending on which components you are going to use, their descriptions are presented in section 3 within the relevant components.

1)

How to fix the problem