

Содержание

9 Поддержка IPv6 3

9 Поддержка IPv6

To enable IPv6 support, make sure that the ipv6 option is set to 1:

```
ipv6=1
```

in the dpi configuration file.

:!:IPv6 support requires additional memory and CPU resources, so if your subscribers aren't provided with IPv6 addresses, then it isn't recommended to enable IPv6 support in DPI