

Содержание

| | |
|------------------------|---|
| 9 Поддержка IPv6 | 3 |
|------------------------|---|

9 Поддержка IPv6

To enable IPv6 support, make sure that the ipv6 option is set to 1:

```
ipv6=1
```

in the dpi configuration file.



IPv6 support requires additional memory and CPU resources, so if your subscribers aren't provided with IPv6 addresses, then it isn't recommended to enable IPv6 support in DPI