

Table of Contents

5 Changing configuration parameters	3
--	----------

5 Changing configuration parameters

Sometimes you may need to modify a value of configuration parameter on the run.

Examples:

This command sets DPI platform into read only mode. DPI does not change any traffic that passes through it in this mode:

```
fdpi_ctrl setenv --passive_mode 1
```



Currently this is the only configuration parameter supported by 'setenv'.