

# Содержание

<b>8 Changing configuration parameters</b> .....	<b>3</b>
--	----------



# 8 Changing configuration parameters

Sometimes you may need to modify a value of configuration parameter on the run.

Examples:

This command sets DPI platform into read only mode. DPI does not change any traffic that passes through it in this mode:

```
fdpi_ctrl setenv --passive_mode 1
```



Currently this is the only configuration parameter supported by 'setenv'.