

**Содержание**

**1 The traffic passes through the Radius server ..... 3**



# 1 The traffic passes through the Radius server

Radius events monitor is connected into the line between the access equipment and Radius server.

An additional DNA network interface is required to transmit Radius server interaction traffic. The configuration parameter to define this interface must be set in configuration file `/etc/dpi/fdpi_radius.conf`:

```
out_dev=dna1
```