

# Table of Contents

<b>SWm/SWx Authorization Mode Settings .....</b>	<b>3</b>
<b>Section "fast-epdg.auth" .....</b>	<b>3</b>



# SWm/SWx Authorization Mode Settings

The parameters of the SWm/SWx interfaces are located in the configuration file in the auth subsection of the fast-epdg section

## Section "fast-epdg.auth"

Parameter	Description	Value
iface	Used interface	[SWm][SWx]
swm {}	SWm interface parameters	
swx {}	SWx interface parameters	
s6b {}	S6b interface parameters	

**Template:**

```
fast-epdg {
    auth {
        iface =
        swm {}
        swx {}
        s6b {}
    }
}
```