

Содержание

Interface configuration example	3
---------------------------------------	---

Interface configuration example

The default configuration file is in `/etc/epdg/fast-epdg.conf`.
The following is an example of interface configuration:



- SWu
- SWm
- SWx
- S6b
- GTP
- GTP-C
- GTP-U

In the example, the blocks corresponding to the interfaces are highlighted with a marker.

```
fast-epdg {
  swu {
    <config-name> {
      apn=
      ike=aes256-sha256-sha1-prfsha256-prfsha1-modp2048-modp1024!
      esp=aes256-sha256-sha1-modp2048-modp1024!
      leftsubnet=
    }
  }

  auth {
    interface =
    swm {
      app_id = swm
      realm =
      host =
      <server-name> {
        priority =
        local =
        remote =
        proto =
      }
    }
  }

  swx {
    app_id = swx
    realm =
    host =
    <server-name> {
      priority =
      local =
      remote =
    }
  }
}
```



```
}  
syslog {  
    daemon {  
        ike =  
        cfg =  
        lib =  
    }  
}  
}
```