

Содержание

Interface configuration example 3

Interface configuration example

The default configuration file is in `/etc/epdg/fast-epdg.conf`.
The following is an example of interface configuration:



- SWu
- SWm
- SWx
- S6b
- GTP
- GTP-C
- GTP-U

In the example, the blocks corresponding to the interfaces are highlighted with a marker.

```
fast-epdg {  
  swu {  
    <config-name> {  
      apn=  
      leftsubnet=  
    }  
  }  
  
  auth {  
    iface =  
    swm {  
      realm =  
      host =  
      <server-name> {  
        priority =  
        local =  
        remote =  
        proto =  
        tls =  
      }  
    }  
  }  
  swx {  
    realm =  
    host =  
    <server-name> {  
      priority =  
      local =  
      remote =  
      proto =  
      tls =  
    }  
  }  
}
```



```
syslog {  
    daemon {  
        cfg =  
        lib =  
    }  
}  
}
```