

Содержание

| | |
|--|---|
| Management and Administration | 3 |
|--|---|

Management and Administration

1. Configuration of the SWu Interface
2. SWm/SWx Authorization Mode Settings
3. SWm Authorization Interface Settings
4. SWa Authorization Interface Settings
5. SWx Authorization Interface Settings
6. S6b Authorization Interface Settings
7. S2b Tunneling Interface Settings
8. GTP Tunneling Protocol Settings