

Содержание

One can control start and stop of the recording on the platform by SM fdpi_ctrl utility when the parameter ajb_reserved=1 is set:

```
fdpi_ctrl setenv --ajb_save_url 1  
fdpi_ctrl setenv --ajb_save_udpi 1
```