

Содержание

To make it possible for the DPI platform to receive SM control commands, one has to specify the following settings in its configuration file `/etc/dpi/fastdpi.conf`:

The listening port number:

```
ctrl_port=29000
```

The network interface name:

```
ctrl_dev=eth0
```