

Содержание

Use cases	3
<i>Stingray Service Gateway Server</i>	3

Use cases

Stingray Service Gateway Server

Before installing VEOS, the server hardware must be prepared according to [the instructions in the Stingray SG section](#).

To configure the operating mode of the DPI server after a successful installation and VEOS boot, the OS must be [preconfigured](#).

[test](#)