

# Содержание

<b>3 Use cases</b> .....	<b>3</b>
<b><i>Stingray Service Gateway Server</i></b> .....	<b>3</b>



# 3 Use cases

## Stingray Service Gateway Server

Before installing VEOS, the server hardware must be prepared according to [the instructions in the Stingray SG section](#).

To configure the operating mode of the DPI server after a successful installation and VEOS boot, the OS must be [preconfigured](#).