

Table of Contents

Searching for Flood Sources in the Operator's Network	3
1. Configuring statistics export from SSG	3
2. Searching for a flood source (BotNet)	3
Searching for subscribers with a high number of flows per second	3
Searching for hosts with a high number of flows per second	5
3. Blocking IPs by assigning them to an autonomous system	6
Creating a local AS (example for IPv4)	6
Assigning a drop rule to the local AS	6

Searching for Flood Sources in the Operator's Network

1. Configuring statistics export from SSG

The following parameter values must be set in the configuration file `/etc/dpi/fastdpi.conf`:

```
netflow=12
netflow_dev=vlan200
netflow_timeout=10
netflow_rate_limit=900
netflow_full_collector=10.0.0.0:1500
netflow_passive_timeout=5
netflow_active_timeout=20
netflow_full_collector_type=2
ipfix_reserved=1
```

where:

- `netflow=12` - statistics collection and export: 8 + 4 = fullnetflow + billnetflow (accounting).
- `netflow_dev=vlan200` - where `vlan200` is the name of the interface from which statistics will be exported.
- `netflow_timeout=10` - export interval in seconds.
- `netflow_rate_limit=900` - IPFIX rate limit.
- `netflow_full_collector=10.0.0.0:1500` - statistics collector address - specify the correct QoE IP.
- `netflow_passive_timeout=5` - inactivity timeout for a session. If no activity is detected during this period, the session is considered finished and its information is exported.
- `netflow_active_timeout=20` - interval for reporting long sessions (i.e., long sessions are split into fragments of this duration).
- `netflow_full_collector_type=2` - export IPFIX to a TCP collector.
- `ipfix_reserved=1` - reserves the required memory to allow enabling/changing IPFIX/Netflow parameters.

After modifying the parameters, restart the service:

```
service fastdpi restart
```

2. Searching for a flood source (BotNet)

Searching for subscribers with a high number of flows per second


1. Open the QoE Analytics report → Raw Full Netflow → Attack detection → Top subscribers → By flow:

2. Set the time range:

2. Set the time range:

3. Add a traffic direction filter - From subscriber:

3. Add a traffic direction filter - From subscriber:

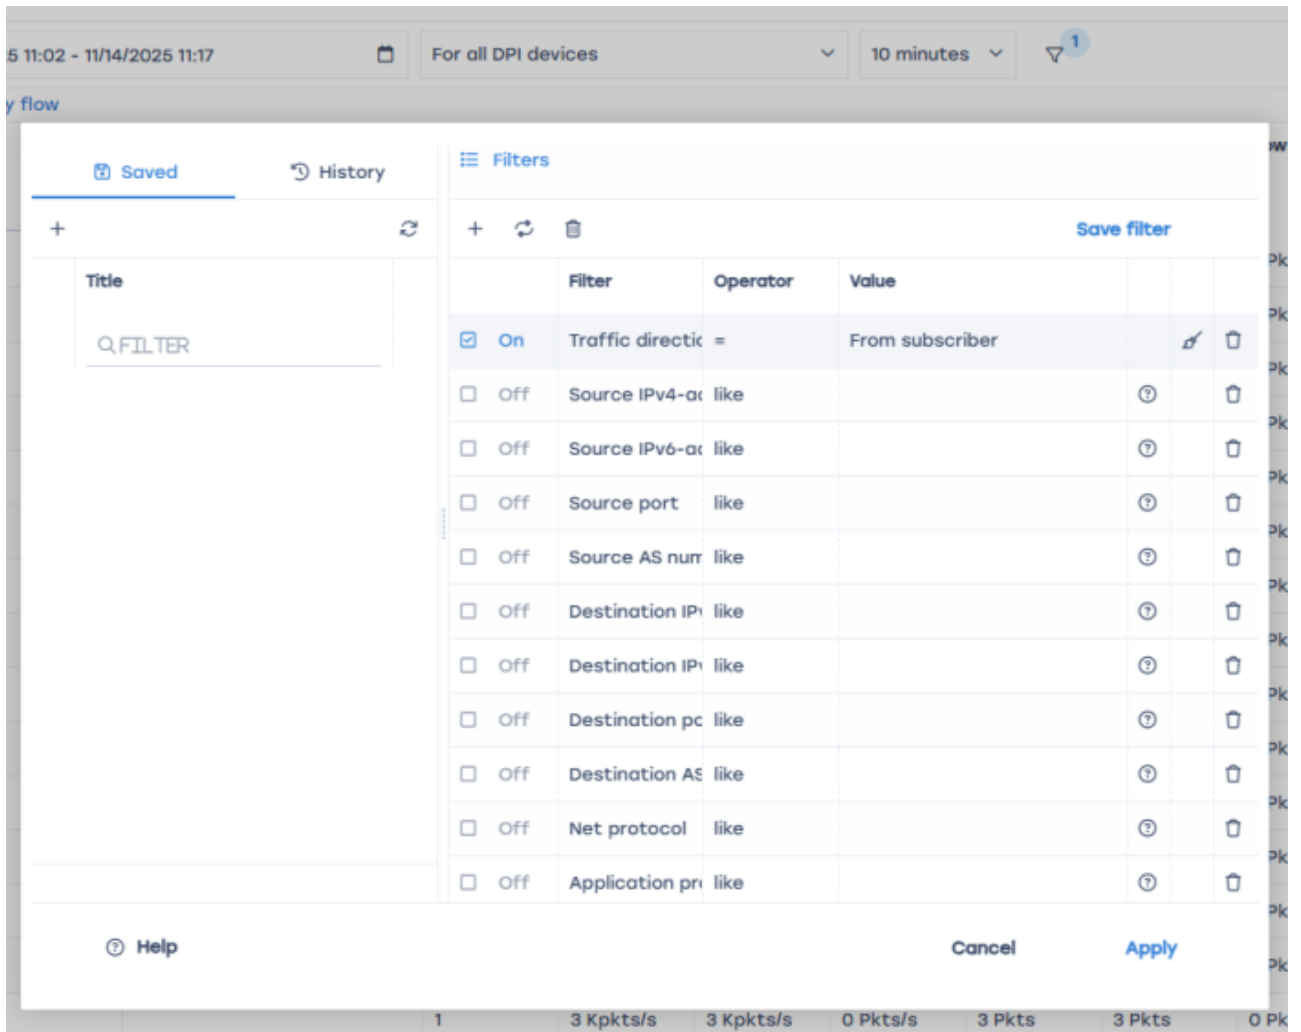

4. Click the Flow column for convenient sorting

The detected subscriber source IP addresses must be added to a local AS ([see section 3.1](#))

Searching for hosts with a high number of flows per second

1. Open the QoE Analytics report → Raw Full Netflow → Attack detection → Top host IP addresses → By flow:

2. Set the time range.
3. Add a traffic direction filter – From subscriber.
4. Click the Flow column for convenient sorting.
The detected host IP addresses must be added to a local AS ([see section 3.1](#))

3. Blocking IPs by assigning them to an autonomous system

Creating a local AS (example for IPv4)

1. Create a copy of /etc/dpi/aslocal.bin:

```
cp /etc/dpi/aslocal.bin /etc/dpi/aslocal.bin.backup
```

2. Convert aslocal.bin to a TXT file using the bin2as utility:

```
bin2as /etc/dpi/aslocal.bin > /etc/dpi/list.txt
```

If the aslocal.bin file is missing in /etc/dpi/, create it:

```
vi /etc/dpi/list.txt
```

3. Add entries to list.txt in the format (CIDR <space> ASN):

```
10.0.0.1/32 64525  
172.16.0.0/12 64525  
192.168.0.0/16 64525
```

Where 64525 is the AS that will later need to be blocked.

4. Convert the CIDR-ASN list from TXT to BIN format using the as2bin utility:

```
cat /etc/dpi/list.txt | as2bin /etc/dpi/aslocal.bin
```

5. Reload the service (hot parameter):

```
service fastdpi reload
```



[More details about preparing aslocal lists](#)

Assigning a drop rule to the local AS

1. Create a copy of the asnum.dscp file:

```
cp /etc/dpi/asnum.dscp /etc/dpi/asnum.dscp.backup
```

2. Convert asnum.dscp to TXT using the dscp2as utility:

```
dscp2as /etc/dpi/asnum.dscp > /etc/dpi/asnum.txt
```

3. Add entries in the format ASN <space> drop to the existing records in asnum.txt:

```
64525 drop
```

4. Convert the TXT file back using the as2dscp utility:

```
cat /etc/dpi/asnum.txt | as2dscp /etc/dpi/asnum.dscp
```

5. Reload the service (hot parameter):

```
service fastdpi reload
```



[More details about DSCP assignment for ASN](#)